




APP Quick Start Guide

Solar Camera WiFi



Please read the instructions carefully before using the product and keep it properly. As the APP version is updated, there will be changes. This manual is for reference.

1.Schematic diagram of interface description

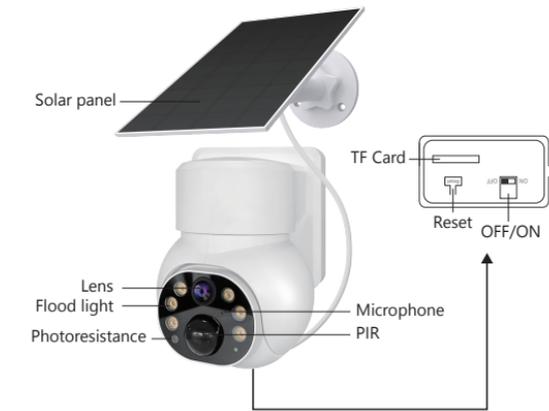

2.Packing list (please refer to the actual product)

- Camera×1
- Solar panel×1
- Solar panel bracket×1
- Manual×1
- Accessory package×1
- Certificate of conformity×1

3.Three, operating instructions

1. Button: *On the back of the camera lens
ON/OFF button : OFF ON
Reset button : In the boot state, long press for 5 seconds to reset.

2. Indicator light:
The red light keeps flashing : Wait to connect to the network.
The red lights always on : In error state, please restart.
The red light keeps flashing : The network connection is in progress.
The blue lights always on : The device is successfully connected.

4.Preparation for use


① After Getting this product, please turn on the device first; for the first use, please use the DC 5V2A charger with configuration The power cord to fully charge the device;
(Built-in battery, charging for 10 hours)

② Download and open the App;
Search for " Smart Life " in the app store or scan the QR code on the manual to download and install the app;
For the first download and use, please click the "register" button to register an account; if you already have an account, click "Login" button.



5.Device connection

- ① If recording is needed, please insert the TF card (the chip of TF card is facing the " Reset " button)
- ② Power on and wait for the beep and the red light flashing.
- ③ Please open the APP homepage to connect to the device; as follows:

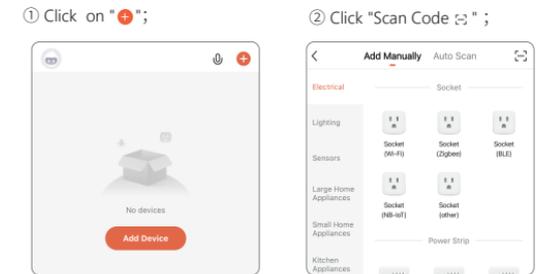

- ④ Click on "Add";



6. A few reminders about the PIR humanoid detection feature.

- ⑤ Click on "Next";
- ⑥ Enter WiFi account & password, Then click "Next";
- ⑦ Confirm that the indicator is flashing or hear the prompt tone, and click "Hear prompt tone";
(If the indicator does not blink or no announcement is heard, the device status is incorrect. Press the reset button 5 seconds, if the indicator blinks or hears a prompt tone, it indicates that it enters the configuration state again.)



7.Equipment instructions

- ⑧ The device is being added;
 - ⑨ The device is connected successfully.
- 1. PTZ Control.**
Click the direction to control the vertical and horizontal rotation of the camera.
- 2. Alexa / Google (The is not free.)**
Support binding third-party software Alexa and Google to wake up the device.
- Third Party Supported
amazon echo Google Home
- 3. Alarm message**
Click on "Message" Notification to view the device's alarm message.
- OFF : In this state, the device will not perform humanoid induction detection.
Low : When the device is in hibernation state, it can sense movement detection within 6 meters and trigger to report.
Middle : When the device is in hibernation state, it can sense movement detection within 9 meters and trigger to report.
High : When the device is in hibernation state, it can sense movement detection within 12 meters and trigger to report.

8.Matters needing attention

- ① PIR is sensitive to cold and hot disturbance, points should be noted during installation:
* Avoid placing the device in places where the air is churning. For example: air conditioning outlet, equipment cooling outlet, fan surrounding, curtain nearby, etc.
* Do not install the device directly in front of the glass or mirror.
* The recommended installation height of the device is about 2.5m-3m.
* Do not invert the device.
- ② The device supports battery power, and the battery's service time is affected by the wake-up time and frequency of the device. So the human detection function is suggested to turn off or set the device to low sensitivity when used in a crowded environment, so as to reduce the wake-up times of the device and extend the application time. When the device is low in power, please charge it in time. If the battery is underpowered for a long time, it may cause battery failure.
- ③ During the installation of the device, please ensure that the WIFI network signal is stable at the installation location, especially outdoors. Please check whether the WIFI is covered. If the WIFI signal is weak, a WIFI router should be added to improve the signal.

9.Troubleshooting

- ④ The device is a low-power intelligent product, which can support APP remote wake up, PIR human detection wake up, button wake up. Each time the wake-up device works, it will automatically enter the sleep state after a short time.
- ⑤ To ensure that the device can work normally, please first use the original DC 5V2A charger with USB cable to charge for 10 hours. Do not use a mobile power supply to charge, otherwise it is very likely to cause a short circuit.
- ⑥ The device supports 2.4GHz WiFi but does not support 5GHz WiFi.
- ⑦ This product provides free cloud storage for one month. After the trial period, if you want to continue to use the cloud storage service, you need to purchase it from the APP (select service).
- ⑧ Failed to configure the network:
* Check whether the device is configured.
* Please ensure that the phone, camera and router are close enough.
* Note that the device does not support 5GHz WIFI routers.
* Check whether the router name and password are correct.
- ⑨ Offline equipment:
* Check whether the router's Internet can be connected properly.
* Check whether the router is connected to the camera. If the router is changed or the WIFI password is modified, please try to reset the device and reconfigure the network.
- ⑩ Unable to preview:
* The server may be congested, please try to restart the APP.

10.Common Problems

- ④ No message push:
* Please ensure that the APP has notification permission.
* Please ensure that the alarm message push switch is turned on in the APP Personal Center Settings.
* Please ensure that the PIR switch is turned on in the device settings.
 - ⑤ No video files:
* Please insert the SD card before starting up.
* Please make sure the device PIR switch is on.
* Please make sure the device recording switch is on.
* Please check whether the SD card status is normal in the APP. If not, please try to format the SD card.
- Q: Why does the battery drain so quickly?
A: APP playback video query will count the recording time every day. Please check whether there are too many videos every day. If there are too many false triggers, please try to lower the sensitivity setting of trigger.
Check whether the WIFI signal between the camera and the router is weak. Try changing the position of the router or camera to improve transmission between them.
Q: How do you ensure that the network connection between the camera and the router is normal?
A: When you reach the camera, trigger the PIR and wait for about 5 seconds. If the camera indicator blinks quickly, it indicates that the camera cannot connect to the router smoothly.

10.Common Problems

- ④ No message push:
* Please ensure that the APP has notification permission.
* Please ensure that the alarm message push switch is turned on in the APP Personal Center Settings.
* Please ensure that the PIR switch is turned on in the device settings.
 - ⑤ No video files:
* Please insert the SD card before starting up.
* Please make sure the device PIR switch is on.
* Please make sure the device recording switch is on.
* Please check whether the SD card status is normal in the APP. If not, please try to format the SD card.
- Q: Why does the battery drain so quickly?
A: APP playback video query will count the recording time every day. Please check whether there are too many videos every day. If there are too many false triggers, please try to lower the sensitivity setting of trigger.
Check whether the WIFI signal between the camera and the router is weak. Try changing the position of the router or camera to improve transmission between them.
Q: How do you ensure that the network connection between the camera and the router is normal?
A: When you reach the camera, trigger the PIR and wait for about 5 seconds. If the camera indicator blinks quickly, it indicates that the camera cannot connect to the router smoothly.

材质：105克哑粉纸，风琴折
成品折后净尺寸：75x125mm
成品展开净尺寸：750x125mm

请做双面折叠：正反面

